



Instructions New from Billy Bob's Universal Graphite Shaft Extension



**Rough the inside of the shaft
with a wire Coat the Expansion
Plug with epoxy and insert into
the butt of the extension**



**Insert the plug inside the extension. At
this point there are 2 ways to install the
extension. See Fig. 1 or Fig. 2**


Fig. 1 Dry Fit



Dry Fit Method
Insert the ext. in the shaft butt.
And simply tap the plug until
you reach the resistance you
need. Note* don't go too far as
you may have trouble removing
the extension. You can remove
the extension to apply the epoxy



Applying the Epoxy
Be sure that you fill up the gaps
and slots with plenty of epoxy.
Also apply some epoxy into the
butt end of the shaft.

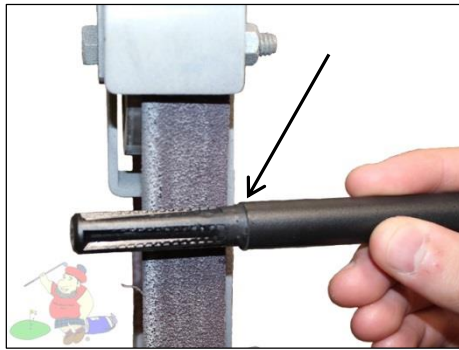

When dry fitting the shaft you may need to sand the top collar if needed this will give it the proper depth insertion

Fig. 2 Wet Fit



Coat the Expansion Plug with epoxy



Coat the Extension and open slots and insert the coated expansion plug into the extension.



Insert the coated extension into the butt.



Once the extension is set into the shaft all the way in, start taping the expansion plug with a Philips Head screw driver, tap the plug until you reach the resistance you need.



Nice flush finish